

 
Design by Gridy
 Image: Non User manual

 D
 Gebrauchsanweisung

 F
 Mode D'emploi

Bruksanvisning

NO



Northern


Warnings

- 1. Indoor use only.
- 2. Be careful when unwrapping the product, not to damage the surface.
- 3. Install the shaft handle of the dustpan in the same direction as the pan itself for correct angle of the broom.
- 4. The broom and dustpan are connected with strong magnets. Do not place magnetic sensitive items like credit cards or hard disks near the magnets at end of the shafts.
- 5. Do not place your fingers between the broom and the dustpan when reconnecting them.
- 6. Please keep away from the reach of children.

Cleaning instructions

- 1. Wipe dust and stains immediately.
- 2. Clean using a soft, dry cotton cloth.
- If a deeper clean is required, a cotton cloth moistened with lukewarm water can be used. Always wipe with a dry cotton cloth to remove any residue.
- 4. Avoid applying strong cleaning agents as it may damage the surface.
- 5. Try to keep the brush head clean and free of dust after use and during storage. Rinse the brush bristles with water if neccessary.



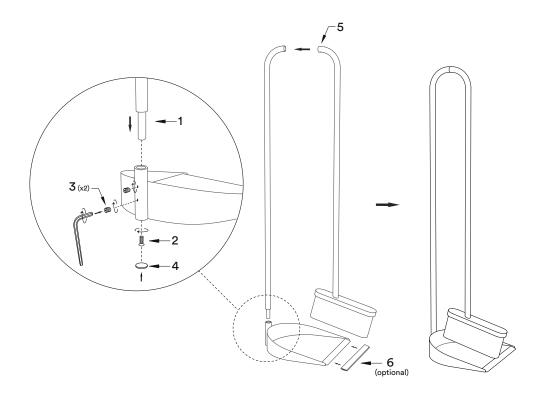

Northern

Contact info

Northern.no AS Bygdøy allé 68 0265 Oslo, Norway

Phone: +47 40 00 70 37 Email: post@northern.no Web: northern.no

Facebook: Northern.no Instagram: @northern.no

More information about our products and updated user manuals are available on our website.

Northern